


# Ship deck floors

Laying instructions from right to left

## Ship deck floors

6 mm rubber strip for Moland flooring, laid as a floating floor

1. The first row is fitted and placed with the groove side towards the wall. **Note:** Molaloc flooring as ship deck flooring is placed with the groove side towards the wall, opposite normal Molaloc flooring. Make sure to keep 10 mm distance to walls, installations etc. End joints must be completely tight and locked (use special tool if necessary).  
**The boards are installed from right to left** (Fig. 1).
2. Having installed the first row, the rubber list is fitted into the special groove. Use special tapping block to ease the installation. Please note that the rubber list should not be pulled or stretched (Fig. 2).
3. Then place the first board in the next row. Place wedges under the board (Fig. 3).
4. The next board is first mounted in the end joints before it is mounted on the long side. Place a wedge under the board (Fig. 4).
5. When the row has been installed, the wedges are removed and the row is pushed down. The other rows are installed similarly. Avoid joining the rubber list (Fig. 5).

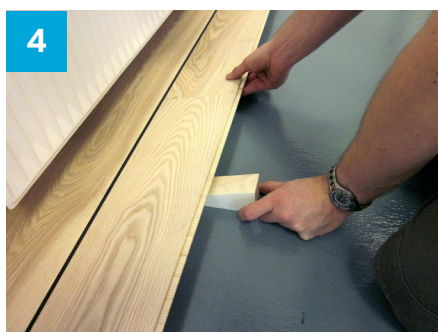

/ We recommend you check the boards are aligned for every 5th row.

/ The installing will be easier when done by 2 persons.

/ Ship deck flooring can be sanded and re-oiled. **We cannot recommend sanding and lacquering.**

/ **Important:** Other conditions and circumstances as mentioned in our general laying instruction, also apply for ship deck flooring.